


GuileKeys GK-16 User Manual

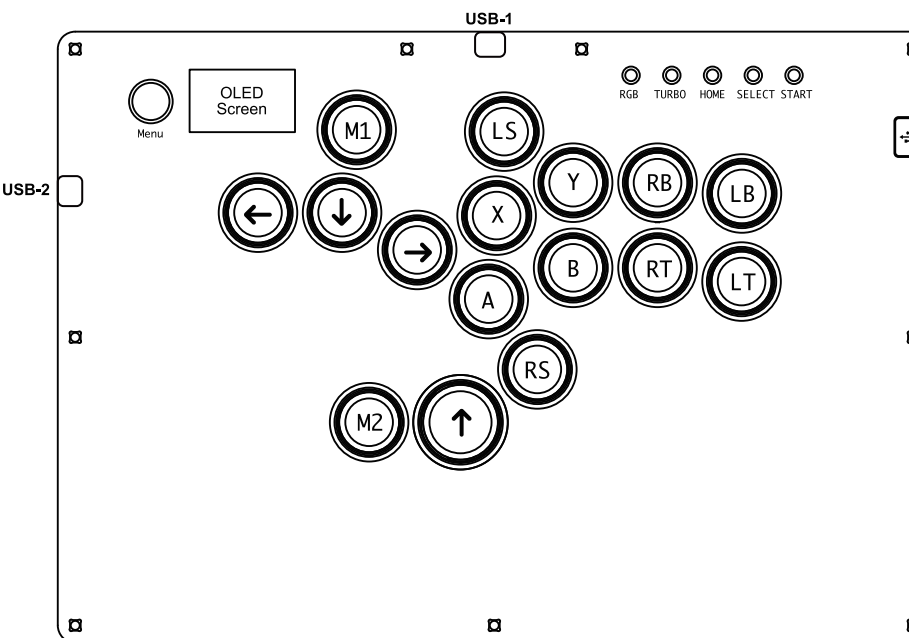

Button mapping reference

RP2040	XINPUT	SWITCH	PS4/PS5	DINPUT	ARCADE	KEYBOARD
PIN19	A	B	X	2	K1	LEFT SHIFT
PIN24	B	A	O	3	K2	Z
PIN18	X	X	□	1	P1	LEFT CONTROL
PIN25	Y	Y	△	4	P2	LEFTALT
PIN29	LB	L	L1	5	P4	C
PIN27	RB	R	R1	6	P3	SPACEBAR
PIN28	LT	ZL	L2	7	K4	V
PIN26	RT	ZR	R2	8	K3	X
PIN05	BACK	MINUS	SELECT	9	COIN	5
PIN06	START	PLUS	START	10	START	1
PIN02	LS	LS	L3	11	LS	EQUAL
PIN01	RS	RS	R3	12	RS	MINUS
PIN04	GUIDE	HOME	PS	13	PS	9
PIN07	M1					
PIN03	M2					
PIN00	TURBO					

RGB LED Strip Setting

- Switch LED Animations: Press button once

(15 LED Animations)

- Seven Color Auto Cycle
- Color Rainbow
- Color Jumping
- Seven Color Gradient Cycle
- Blue-Purple Alternating Gradient
- Color Chase
- Color Brush
- Red-Green-Blue Brush Close
- Black
- Static Cyan
- Static Purple
- Static Green
- Static Blue
- Static Red
- Color Flow

- Turn Off the LEDs: Hold & press (>=3 Seconds)




- Turn ON the LEDs: Hold & press (>=3 Seconds)

Menu Button Usage Instructions

- You can quickly set modes and customize your keyboard through the multifunction button, eliminating the hassle of shortcut operations.







Set Menu

Follow the steps below to quickly enter the [set menu].

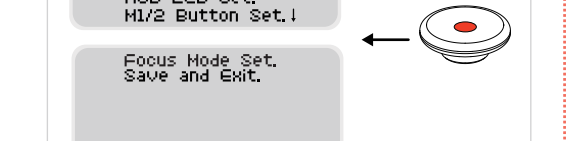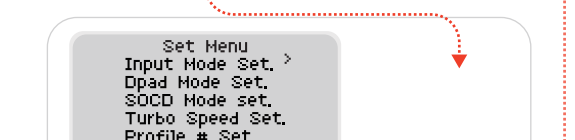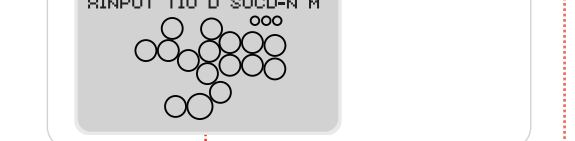






Input Mode Set.

Switch input mode by following these steps (e.g., PS4).
Note: After the input mode setting is completed, the device will automatically restart.

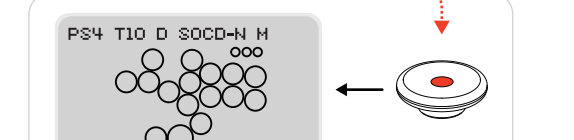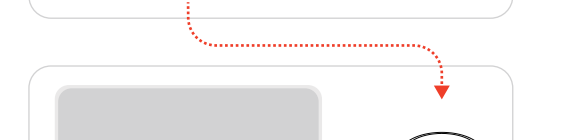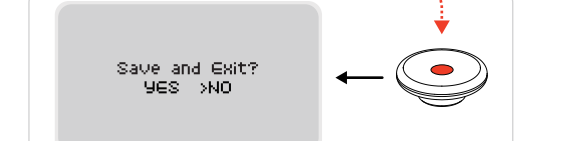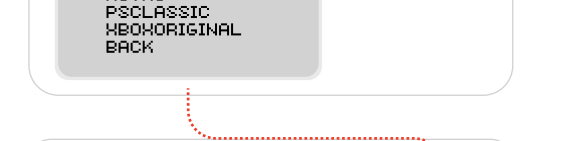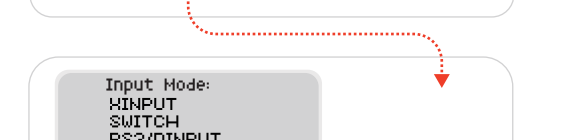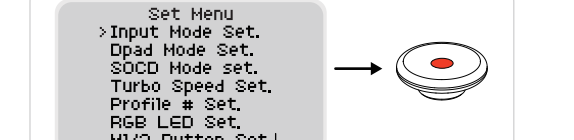







Dpad Mode Set.

Switch Dpad Mode by following these steps (e.g., Digital).

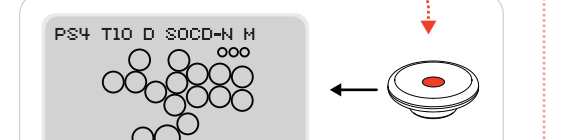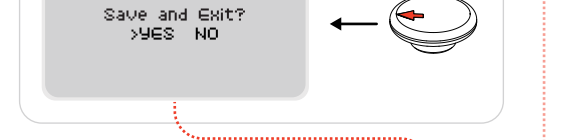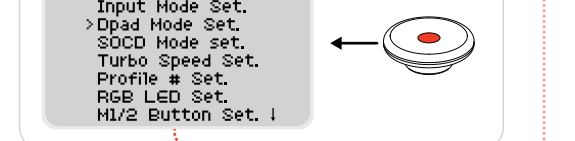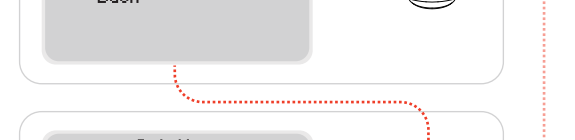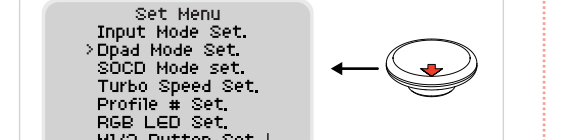





SOCD Mode Set.

Switch SOCD Mode by following these steps (e.g., Up Priority).

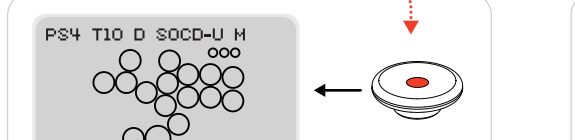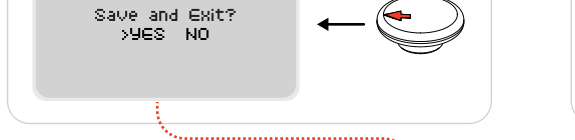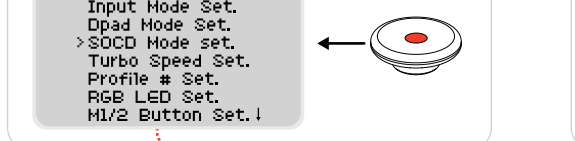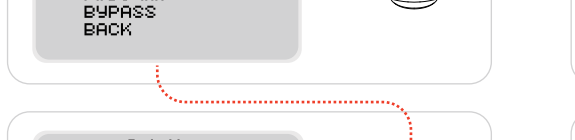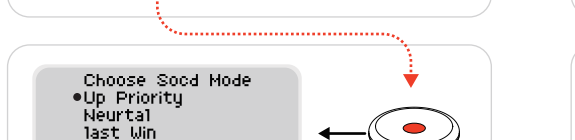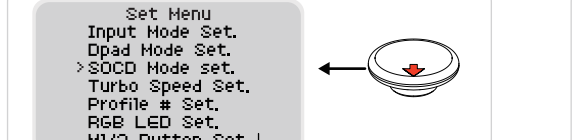




Turbo Speed Set.

Switch Turbo Speed by following these steps.
Minimum Turbo Speed: 2
Maximum Turbo Speed: 30

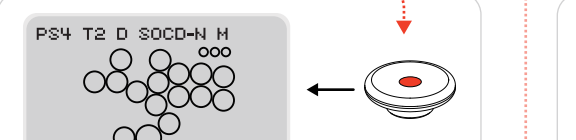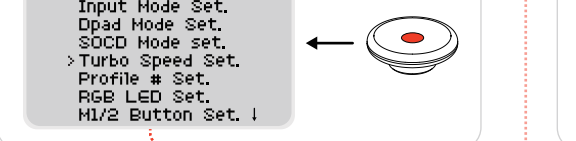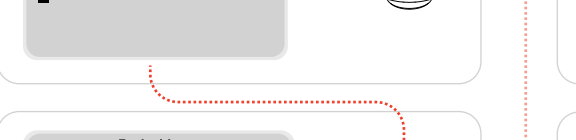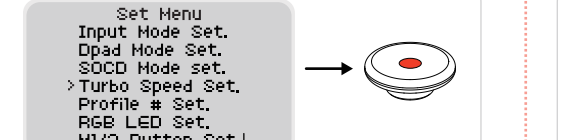






Profile # Set.

Switch key-value presets by following these steps (e.g., profile # 2).
Note: After completing the setup, the device will restart.

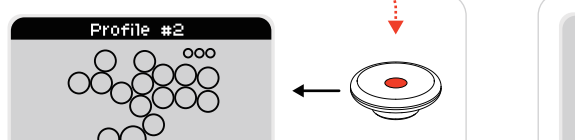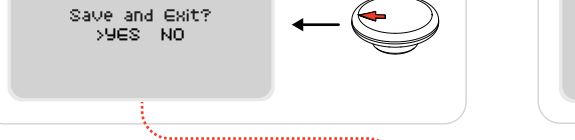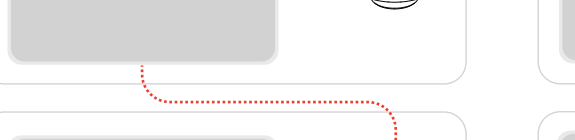







RGB LED Set.

Switch button LED animation by following these steps.

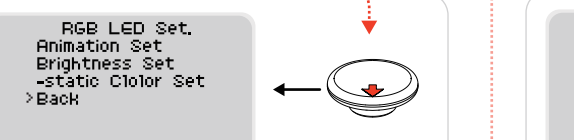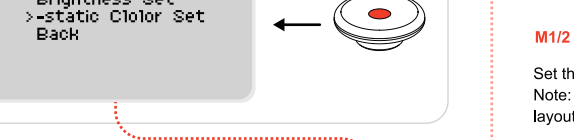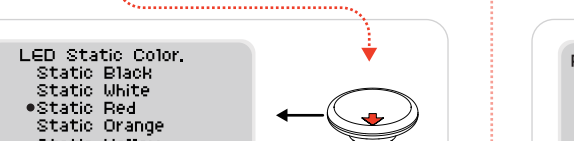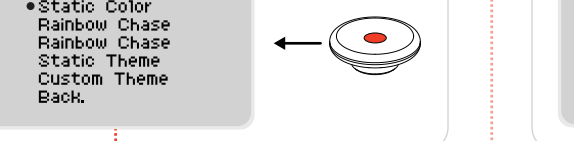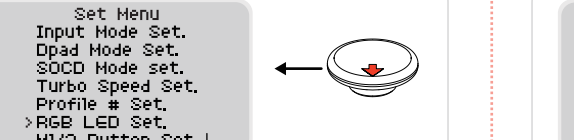







M1/2 Button Set.

Set the M1/M2 key values by following these steps.
Note: the same key value cannot appear twice in the same keyboard layout.

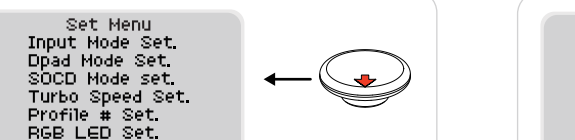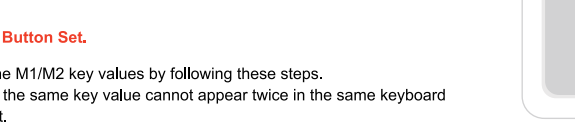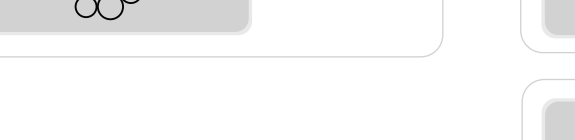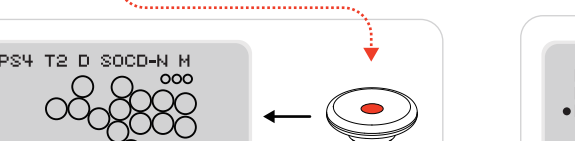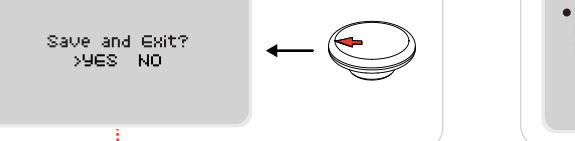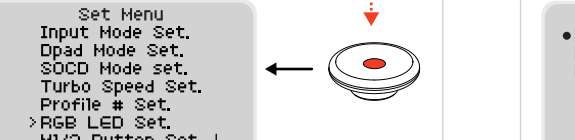








Focus Mode Set.

Disable Macro and button input in the focus mode settings by following these steps.

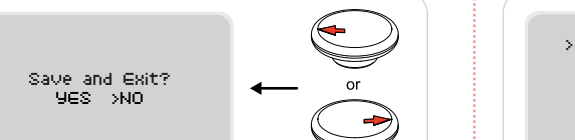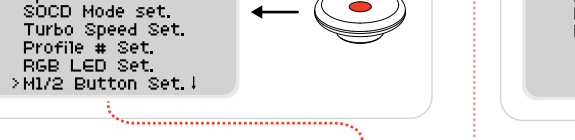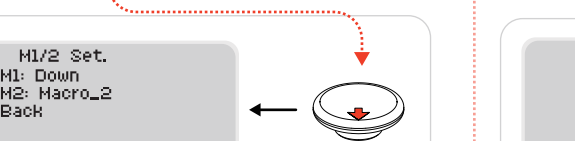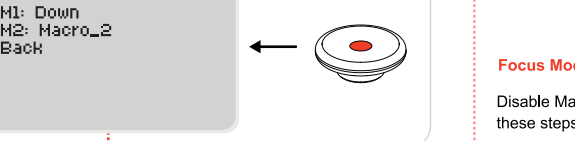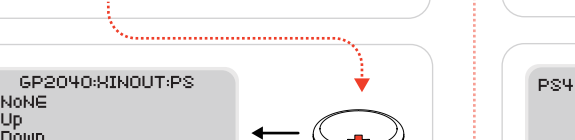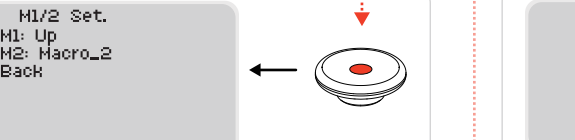







LockButtons Set.

Lock button LED animation by following these steps.

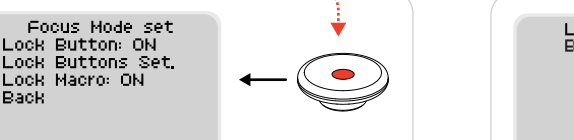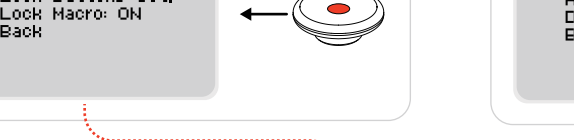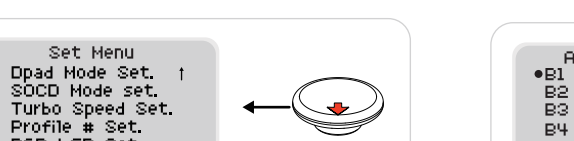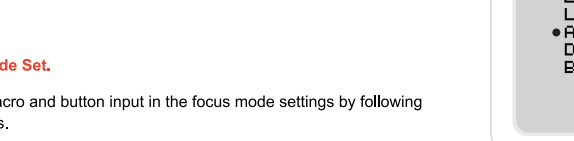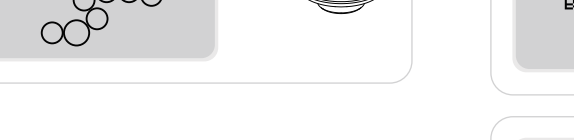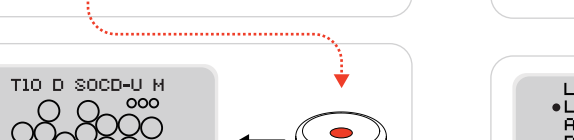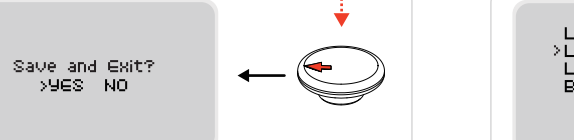









Focus Mode Set.

Disable Macro and button input in the focus mode settings by following these steps.

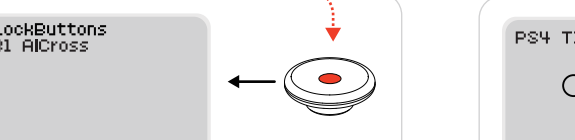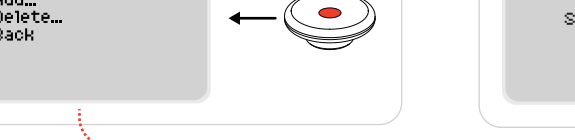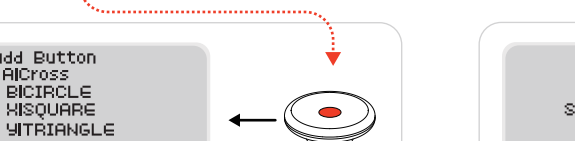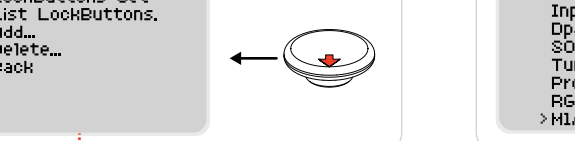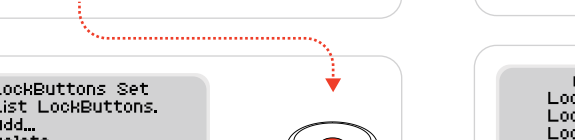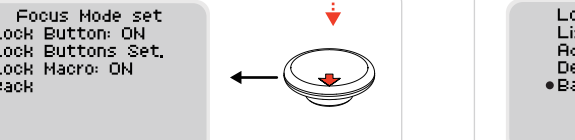


LockButtons Set.

Lock button LED animation by following these steps.

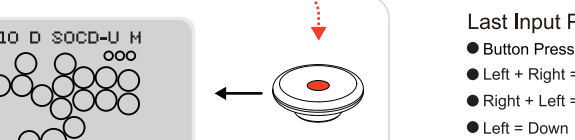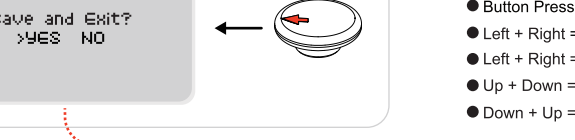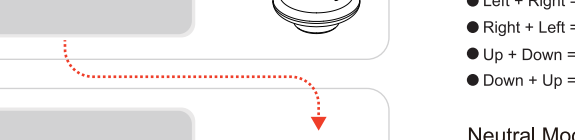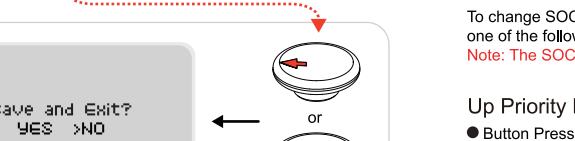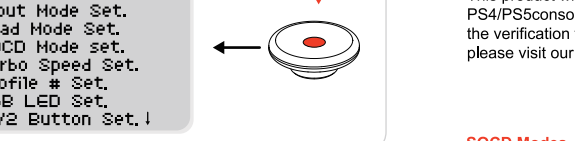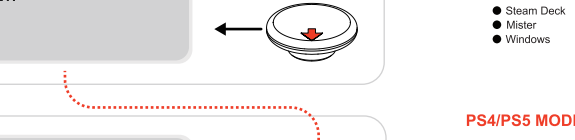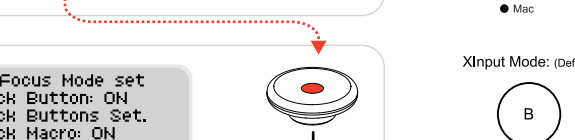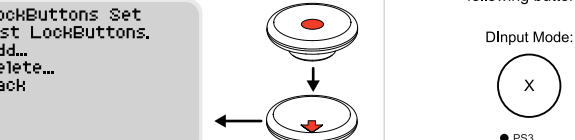

Other Functions

To change input modes, please press and hold down one of the following buttons before power on the gamepad.

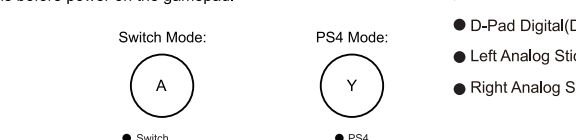

To change D-pad modes, please hold down SELECT + START and press one of the following buttons.

- D-Pad Digital(Default): SELECT+START+ DOWN
- Left Analog Stick: SELECT+START+ LEFT
- Right Analog Stick: SELECT+START+ RIGHT

To change RGB LED Animations, please hold down Start + Select and press one of the following buttons.

- SELECT + START + X Next Animation
- SELECT + START + A Previous Animation
- SELECT + START + Y Brightness Up
- SELECT + START + B - Brightness Down
- SELECT + START + RB LED Parameter Up
- SELECT + START + RT - LED Parameter Down
- SELECT + START + LB Pressed Parameter Up
- SELECT + START + LT Pressed Parameter Down

The gamepad is built-in a local web server to set up the configurations, please follow these steps to access the webpages.

- Press and hold START before plug the gamepad into a computer with usb type-c cable.
- Open a browser and navigate to http://192.168.7.1. Then, you can proceed with the gamepad settings

To enable Turbo mode, please hold down the TURBO button and press the corresponding button, including X/Y/RB/LB and A/B/RT/LT. The speed can be adjusted from 1 to 60 times per second.

- Increase Speed (TURBO + UP)
- Lower the Speed (TURBO + DOWN)

Note: Any changes made to the gamepad's settings will not be saved once it loses power. The turbo mode's default speed is 15 times per second.

Note: The SOCD mode's default setting is SOCD-N.

Note: Any changes made to the gamepad's settings will not be saved once it loses power. The turbo mode's default speed is 15 times per second.

Note: Any changes made to the gamepad's settings will not be saved once it loses power. The turbo mode's default speed is 15 times per second.


Note: Any changes made to the gamepad's settings will not be saved once it loses power. The turbo mode's default speed is 15 times per second.

Note: Any changes made to the gamepad's settings will not be saved once it loses power. The turbo mode's default speed is 15 times per second.

Note: Any changes made to the gamepad's settings will not be saved once it loses power. The turbo mode's default speed is 15 times per second.

Note: Any changes made to the gamepad's settings will not be saved once it loses power. The turbo mode's default speed is 15 times per second.

GuileKeys GK-16 ユーザーマニュアル

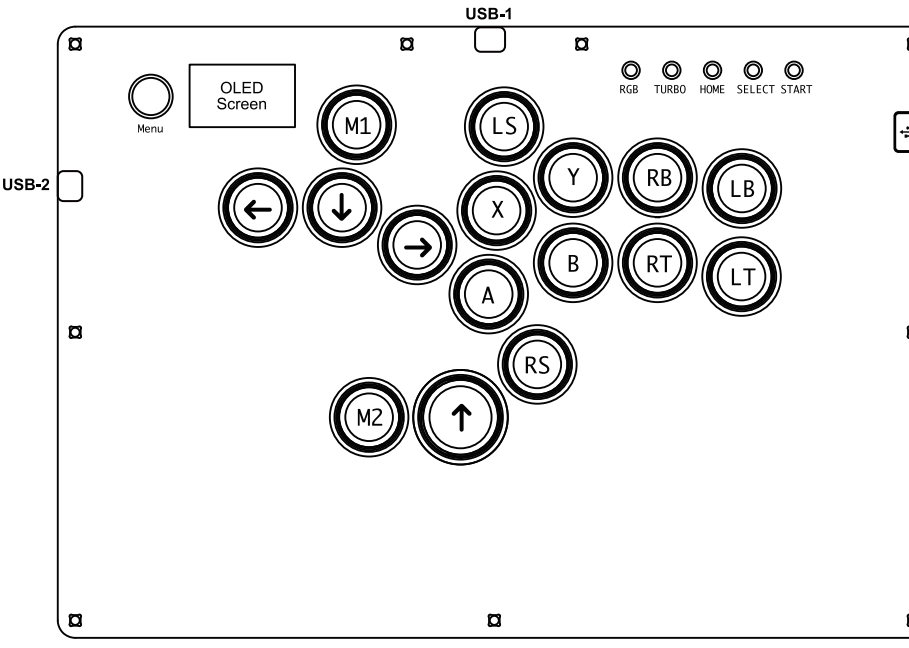

ボタンマッピングリファレンス

RP2940	XINPUT	SWITCH	PS4/PS5	DINPUT	ARCADE	KEYBOARD
PIN19	A	B	X	2	K1	LEFT SHIFT
PIN24	B	A	○	3	K2	Z
PIN18	X	X	□	1	P1	LEFT CONTROL
PIN25	Y	Y	△	4	P2	LEFTALT
PIN29	LB	L	L1	5	P4	C
PIN27	RB	R	R1	6	P3	SPACEBAR
PIN28	LT	ZL	L2	7	K4	V
PIN26	RT	ZR	R2	8	K3	X
PIN05	BACK	MINUS	SELECT	9	COIN	5
PIN06	START	PLUS	START	10	START	1
PIN02	LS	LS	L3	11	LS	EQUAL
PIN01	RS	RS	R3	12	RS	MINUS
PIN04	GUIDE	HOME	PS	13	PS	9
PIN07	M1					
PIN03	M2					
PIN00	TURBO					

RGB LEDストリップ設定


- LEDアニメーションを切り替える: ボタンを長押し (≧3秒) 戻す
- LEDをオフにする: ボタンを長押し (≧3秒)
- LEDをオンにする: ボタンを長押し (≧3秒)

メニューボタンの使用手順

- 多機能 ボタンでモードを素早く設定し、キーボードをカスタマイズできるため、ショートカット操作の手順が省けます。


セットメニュー

以下の手順に従って、「[セットメニュー]」に素早く入ります。

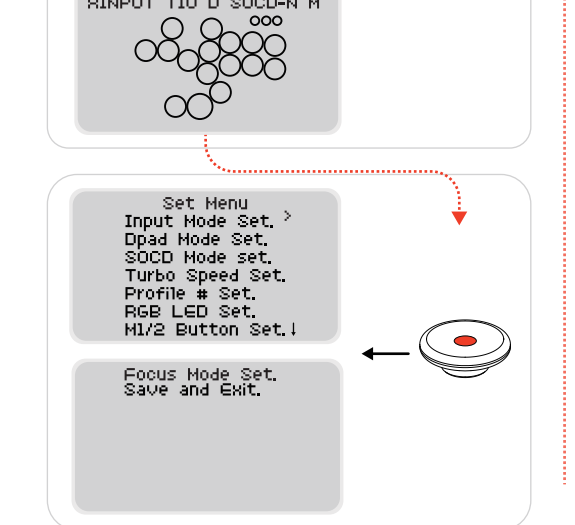


入力モード設定

以下の手順に従って入力モードを切り替えます (例: PS4)。
注: 入力モードの設定が完了すると、デバイスが自動的に再起動します。

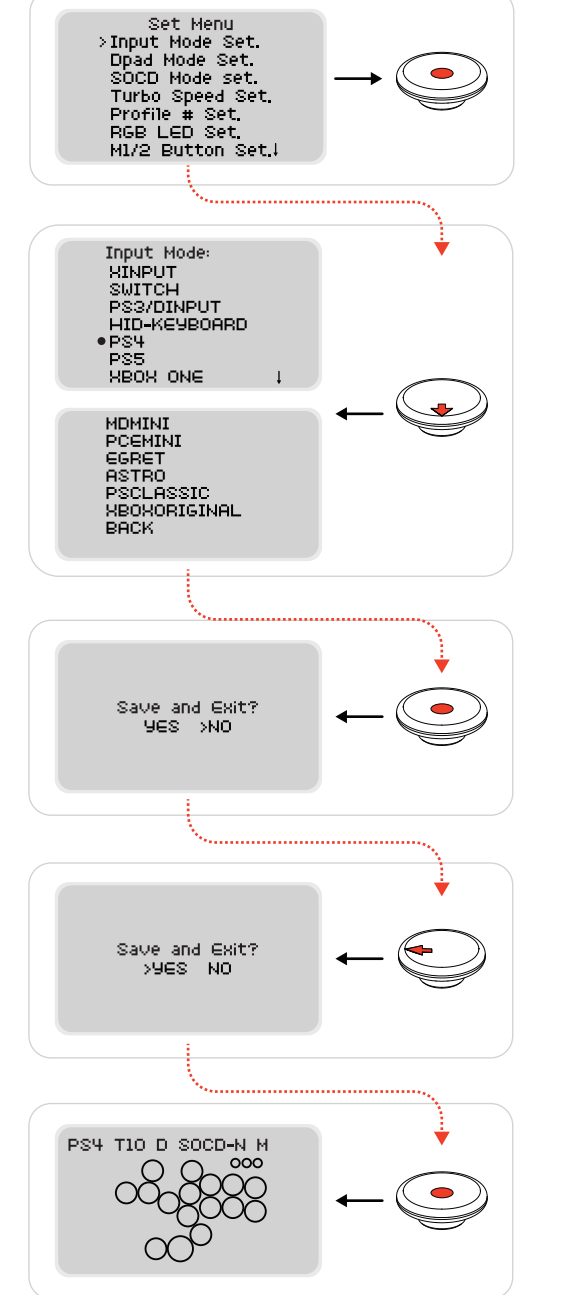


Dpadモード設定

次の手順に従ってDpadモードを切り替えます (例: デジタル)。

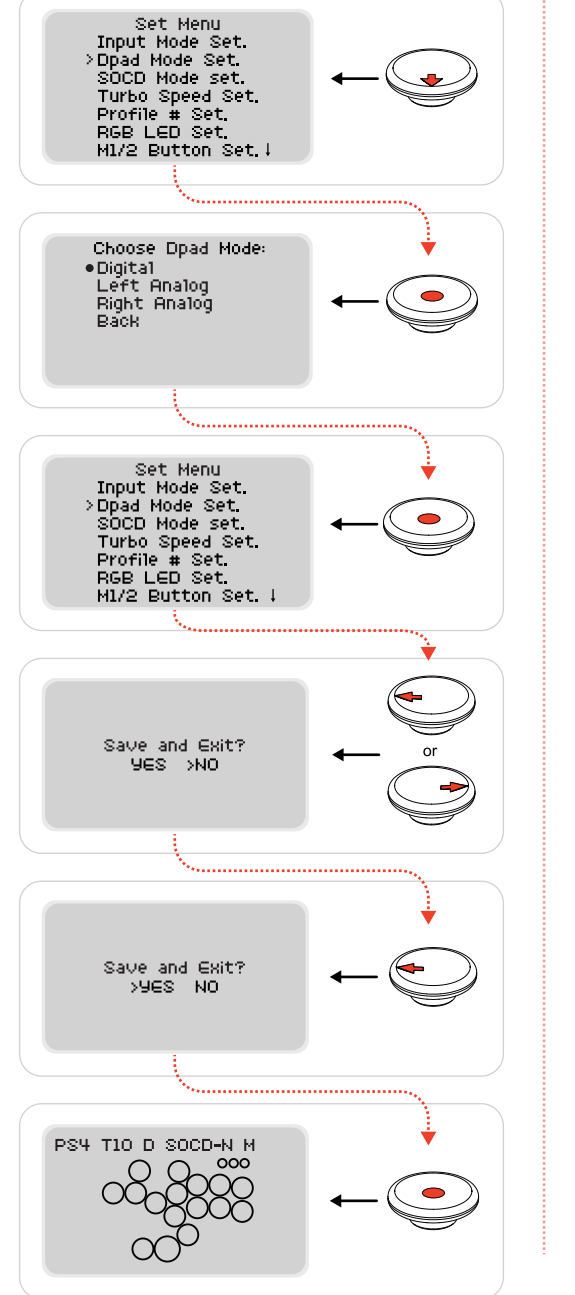


SOCDモード設定

次の手順に従ってSOCDモードを切り替えます (例: Up Priority)。

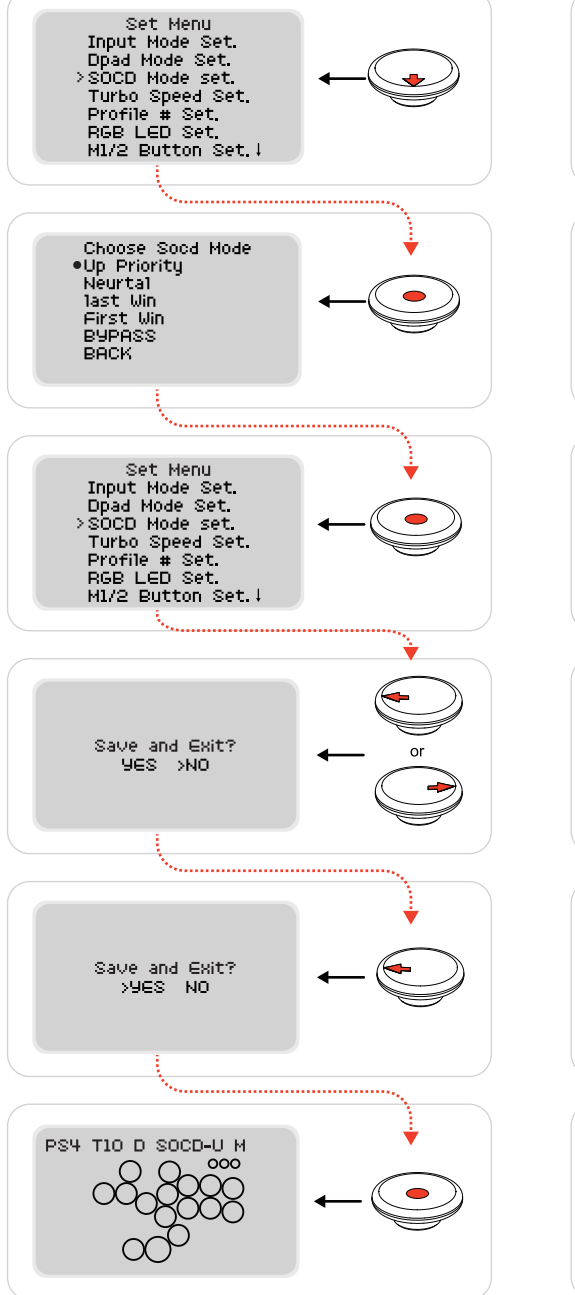


ターボスピードセット

以下の手順に従ってターボ速度を切り替えます。
最小ターボ速度: 2
最大ターボ速度: 30

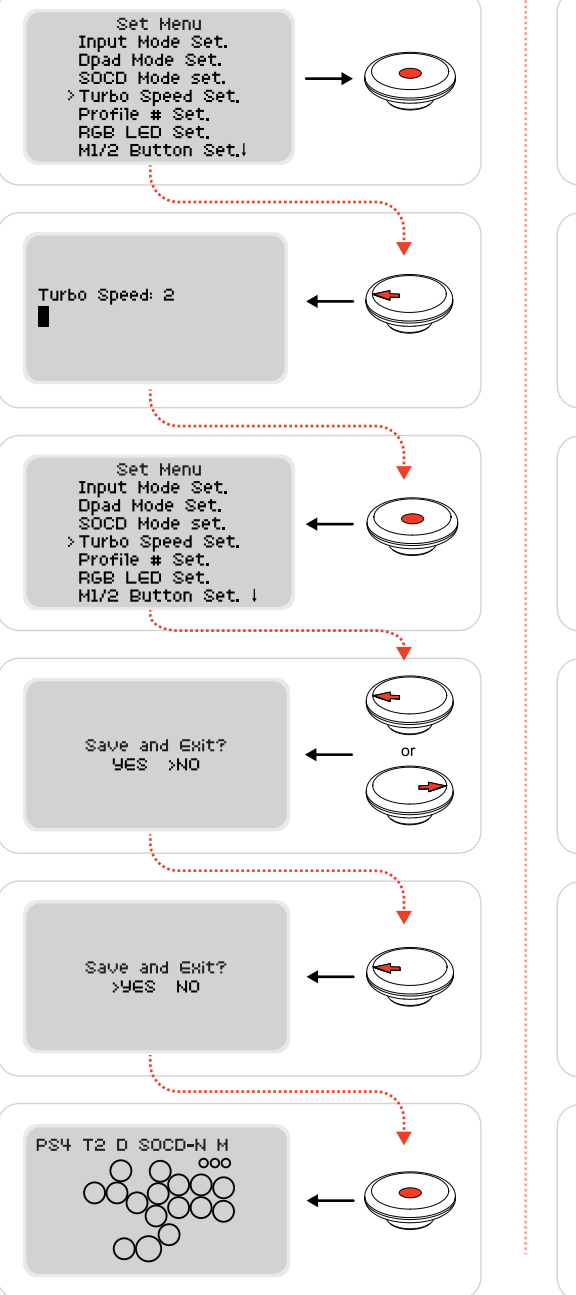


プロフィール設定

次の手順に従ってキー値プリセットを切り替えます (例: プロファイル番号: 2)。
注: セットアップが完了すると、デバイスが再起動します。

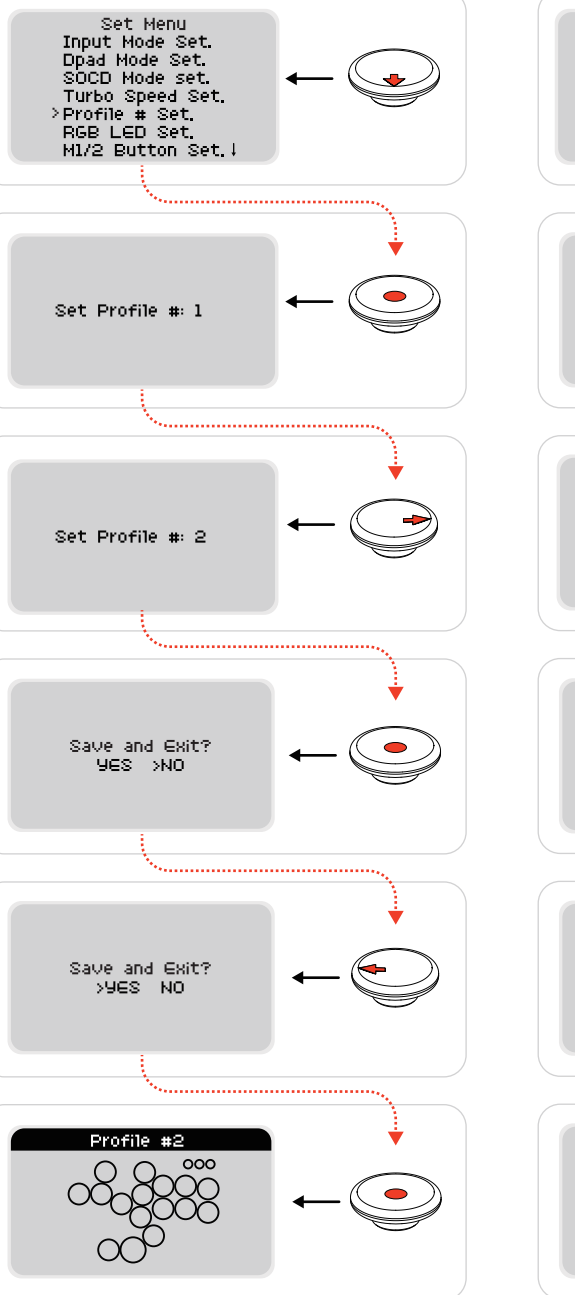


RGB LEDセット

次の手順に従って、ボタンのLEDアニメーションを切り替えます。

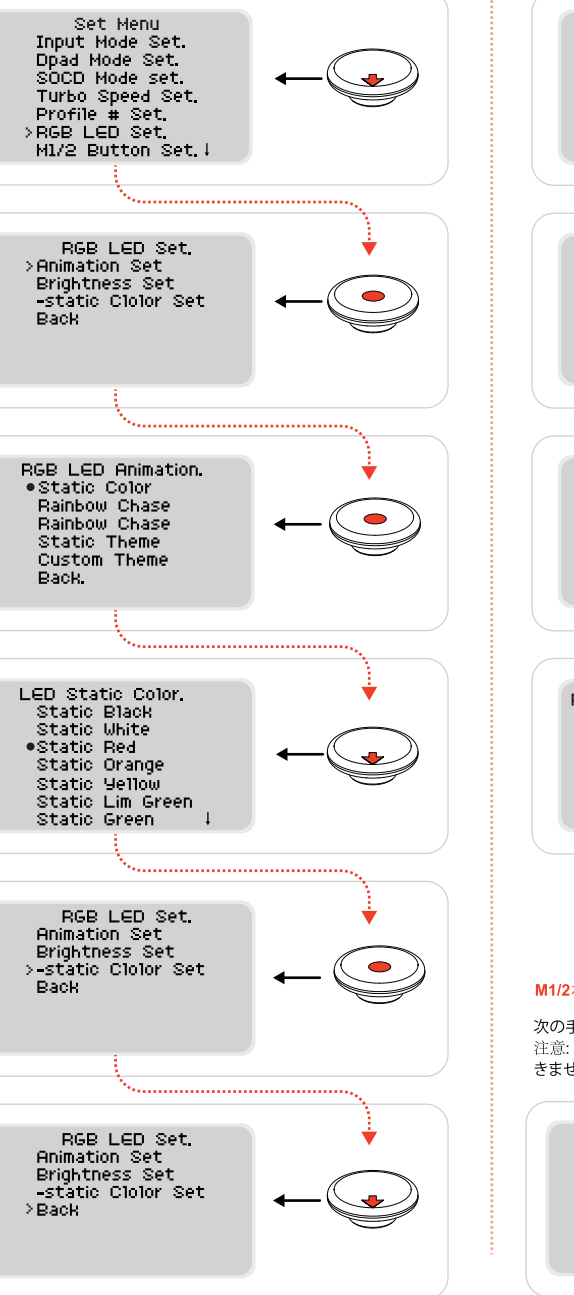


M1/M2ボタンセット

次の手順に従って、M1/M2キーの値を設定します。
注意: 同じキー値を同じキーボードレイアウトに2回表示することはできません。

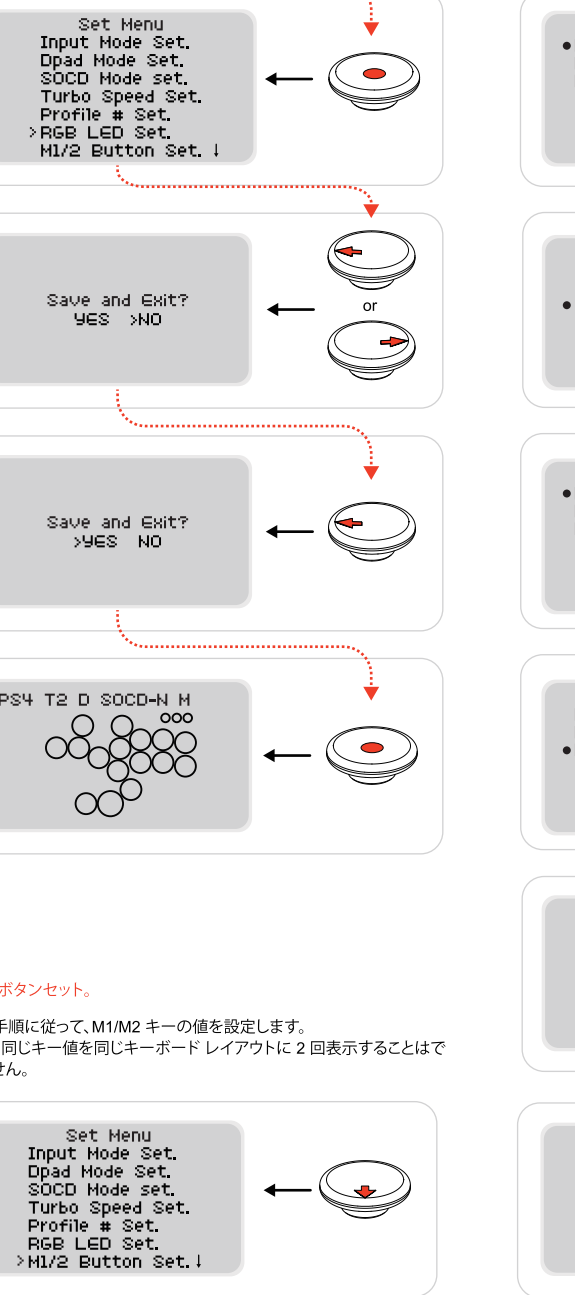


HI/2ボタンセット

次の手順に従って、HI/2ボタンセットを設定します。

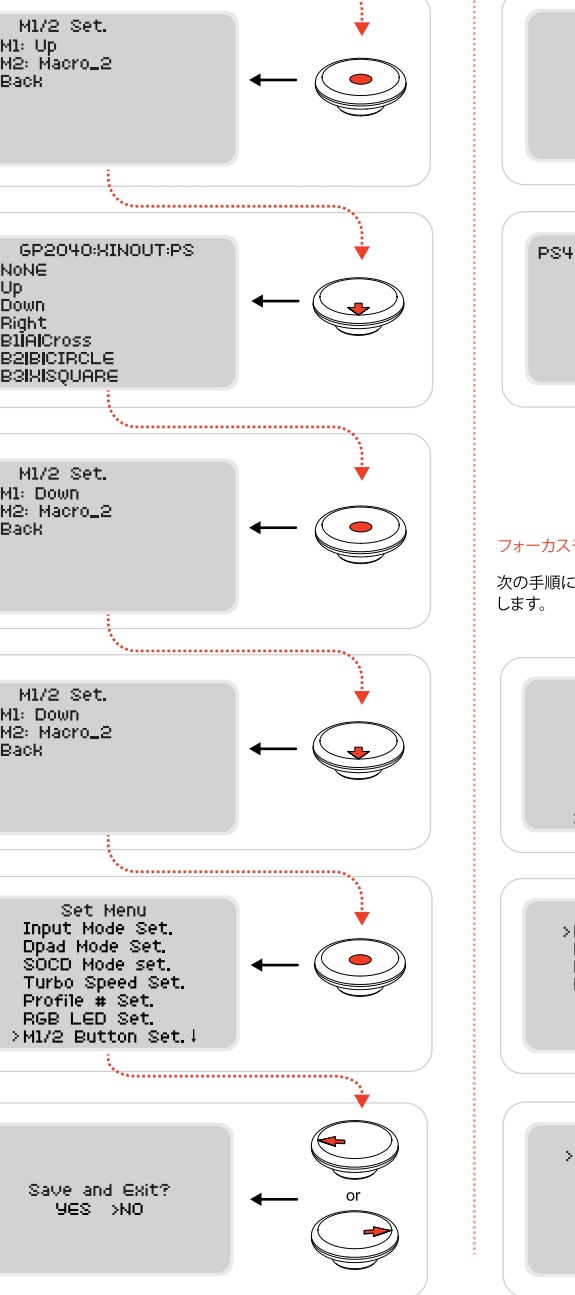


フォーカスモード設定

次の手順に従って、フォーカスモード設定でマクロとボタン入力を無効にします。

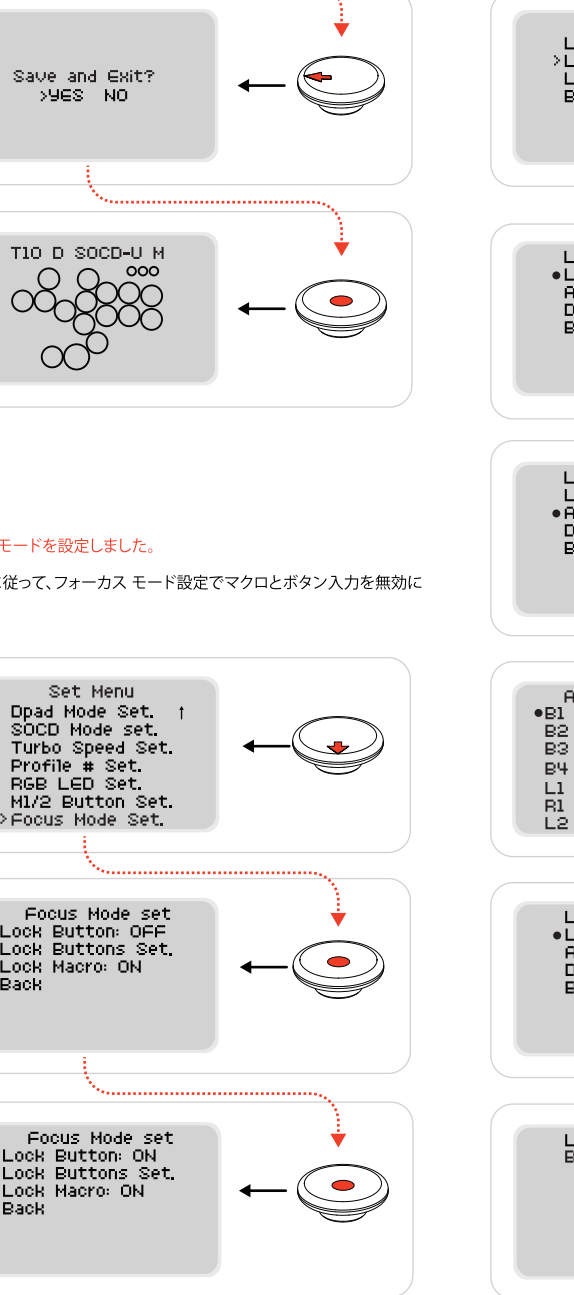


LockButtons設定

次の手順に従って、LockButtons設定を行います。

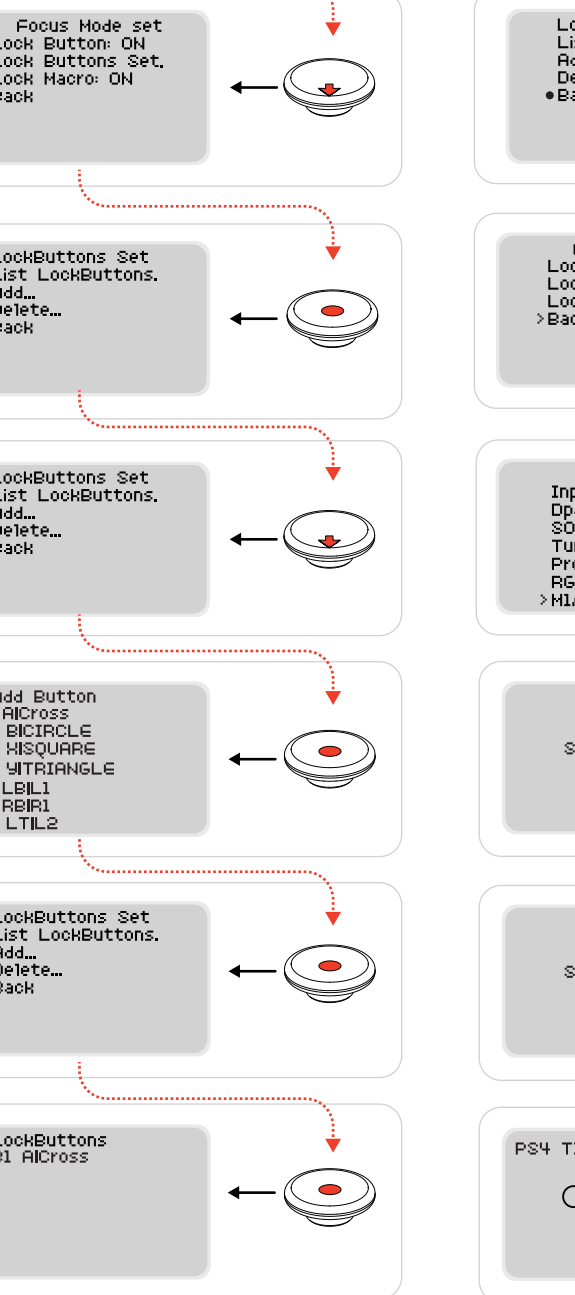

PS4 TIO D SOCD-U H


次の手順に従って、PS4 TIO D SOCD-U H設定を行います。

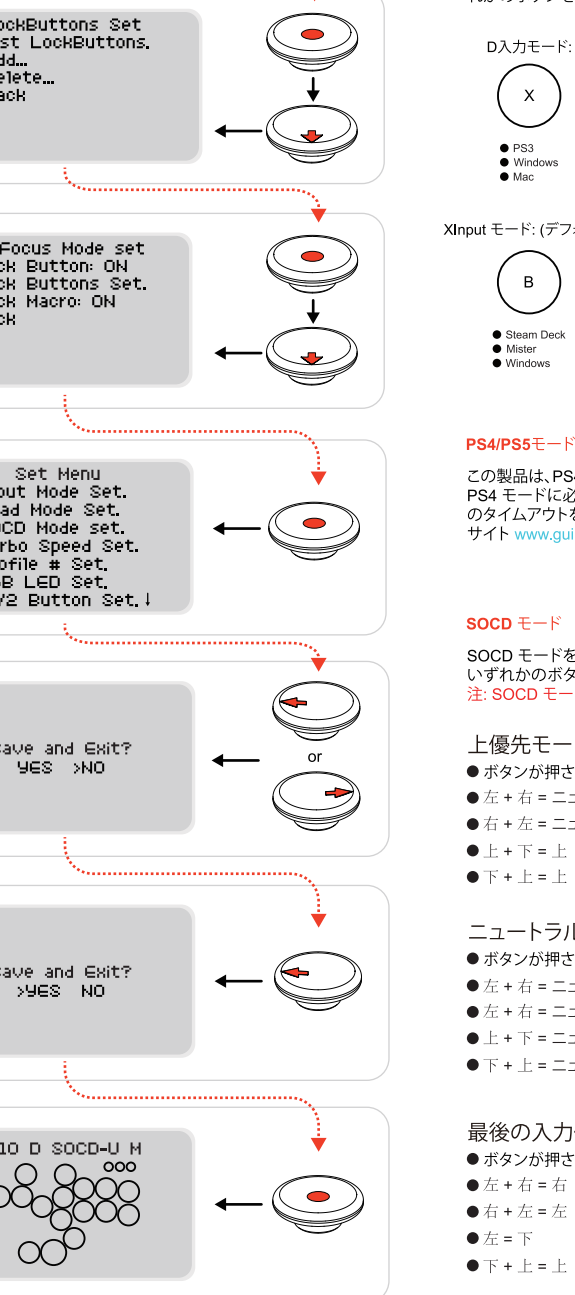

その他の機能

Input Modes

入力モードを変更するには、ゲームパッドの電源を入れる前に、次のいずれかのボタンを押し続けます。

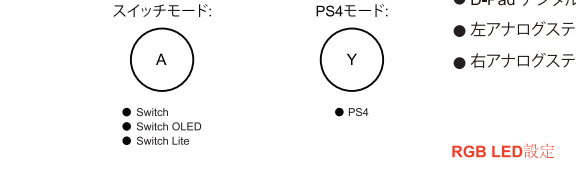

XInputモード (デフォルト) HID-KBモード (USBキーボード)



PS4/PS5モード

この製品は、PS4/PS5コンソールに接続してから8分後に切断されます。PS4モードに必要ないかなる設定ファイルはアップロードすることで、この8分間のタイムアウトを回避できます。詳細な手順については、当社の公式Webサイト www.guilekeys.com をご覧ください。

SOCDモード

SOCDモードを変更するには、HOME + STARTキーを押しながら、次のいずれかのボタンを押してください。
注: SOCDモードのデフォルト設定はSOCD-Nです。

上優先モード: (HOME + START + UP)

- ボタンが押された = 結果
- 左 + 右 = ニュートラル
- 右 + 左 = ニュートラル
- 上 + 下 = 上
- 下 + 上 = 上

ニュートラルモード: (HOME + START + DOWN)

- ボタンが押された = 結果
- 左 + 右 = ニュートラル
- 右 + 左 = ニュートラル
- 上 + 下 = ニュートラル
- 下 + 上 = ニュートラル

最後の入力優先モード: (HOME + START + 左)

- ボタンが押された = 結果
- 左 + 右 = 右
- 右 + 左 = 左
- 上 + 下 = 上
- 下 + 上 = 上

注意: ゲームパッドの設定に加えた変更は、電源が切れると保存されません。ターボモードのデフォルトの速度は1秒あたり15回です。

- スピードアップ (TURBO + UP)
- 速度を下げる (TURBO + DOWN)

DPadモード設定

Dパッドモードを変更するには、SELECT + STARTを押しながら、次のいずれかのボタンを押してください。

- D-Pad デジタル (デフォルト): SELECT + START + DOWN
- 左アナログスティック: SELECT + START + LEFT
- 右アナログスティック: SELECT + START + 右

RGB LED設定

RGB LEDアニメーションを変更するには、Start + Selectキーを押しながら、次のいずれかのボタンを押してください。

- SELECT + START + X 次のアニメーション
- SELECT + START + A 前のアニメーション
- SELECT + START + Y 明るさアップ
- SELECT + START + B 明るさダウン
- SELECT + START + RB LEDパラメータアップ
- SELECT + START + RT LEDパラメータダウン
- SELECT + START + LB 押されたパラメータアップ
- SELECT + START + LT 押されたパラメータダウン

ウェブ接続

ゲームパッドには、設定を行うためのローカルWebサーバーが組み込まれています。Webページにアクセスするには、次の手順に従ってください。

- USBタイプCケーブルを使用してゲームパッドをコンピュータに接続する前に、STARTキーを押してください。
- ブラウザを開き、<http://192.168.7.1> に移動します。その後、ゲームパッドの設定を続行できます。

ターボモード

ターボモードを有効にするには、TURBOボタンを押しながら、XY/RB/LB、AB/RT/LTなどの対応するボタンを押してください。速度は1秒あたり1-60回まで調整できます。

注意: ゲームパッドの設定に加えた変更は、電源が切れると保存されません。ターボモードのデフォルトの速度は1秒あたり15回です。

- スピードアップ (TURBO + UP)
- 速度を下げる (TURBO + DOWN)